

OXXA CLOTHING SIZE CHART

Unit: cm	S	M	L	XL	XXL	3XL					
Sizing Europe	44	46	48	50	52	54	56	58	60	62	64
Sizing UK	28	30	32	34	36	38	40	42	44	46	48
Chest	86-90	90-94	94-98	98-102	102-106	106-110	110-114	114-118	118-122	122-126	126-130
Waist	78-82	82-86	86-90	90-94	94-98	98-102	102-106	106-110	110-114	114-118	118-122
Height	164-172	164-172	164-172	172-180	172-180	172-180	180-188	180-188	180-188	188-195	188-195
1/2 waist	38	40	42	44	47	50	52	54	56	58	60
1/2 hips (20cm below waistband)	47	49	51	53	56	59	61	63	65	67	69
1/2 thigh	30,5	31,5	32,5	33,5	35	36,5	37,5	38,5	39,5	40,5	41,5
1/2 foot	19	20	21	22	23	24	24	25	25	26	26
Front rise (excluding waistband)	24,5	24,5	24,5	24,5	25,5	25,5	25,5	25,5	26,5	26,5	26,5
Back rise (excluding waistband)	37,5	37,5	37,5	37,5	38,5	38,5	38,5	38,5	39,5	39,5	39,5
Outseam (excluding waistband)	105	105	105	105	107	107	107	107	109	109	109
Innerseam	82	82	82	82	83	83	83	83	84	84	84



THE COMFORT OF SAFETY